


Outline: This talk will cover how to safely cut the penetrations.

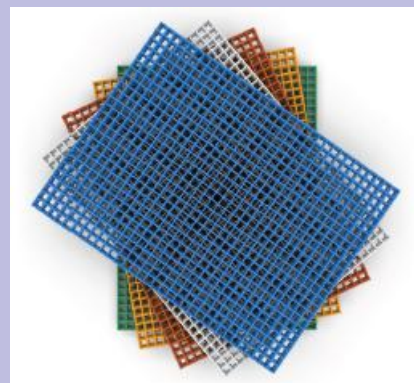

Q: Where can you find the COSHH Data Sheets?

[illegible]

Vital GRP 2025

TOOLBOX TALK #40

Cutting GRP Grating for services

NOTES

Install:

- Check the dimensions and position of the cut out and mark out on grating. Cut outs should be as tight as possible to services allowing for install and any lagging.
- Cutting of GRP grating is best performed with a jigsaw attached to appropriate dust extraction fitted with a Bosch T141HM CT blade or similar carbide tipped jigsaw blade.
- Always try to keep at least a full square of grating between service outs (this is two structural bars).
- Cut to the marked out area with jigsaw and ensure to support the cut out before final cut to prevent cut out falling down to the next level.
- All GRP waste from cut out should be disposed of immediately in the correct general waste bins.

Q: What document should you always work to?

Q: What should you do if you have a large cut out to do?

Do you have any questions for me?

REMEMBER:

IF IN DOUBT THEN ALWAYS WORK TO YOUR RAMS

Sources: [Construction - HSE Using personal protective equipment \(PPE\) to control risks at work: Overview - HSE](#)
[Administration - HSE Risk assessment: Template and examples - HSE](#)

For more information

Call: +44(0) 1206 396446

Email: sales@vitalgrp.co.uk
vitalgrp.co.uk